

Redundancy case

In redundancy mode, two Ethernet modules plugged in slots E1 and E2 are needed.

The Ethernet module in slot E1 is used for communication with the operator level. The instructions for setting up the module in the standard or special case apply to this module as well.

The second Ethernet module (slot E2) is connected to the redundant AC 800F. In this case, the coding switch on the Ethernet module must be set to position **F**.



Set the **coding switch** of the Ethernet module in **slot E2** to position **F**.

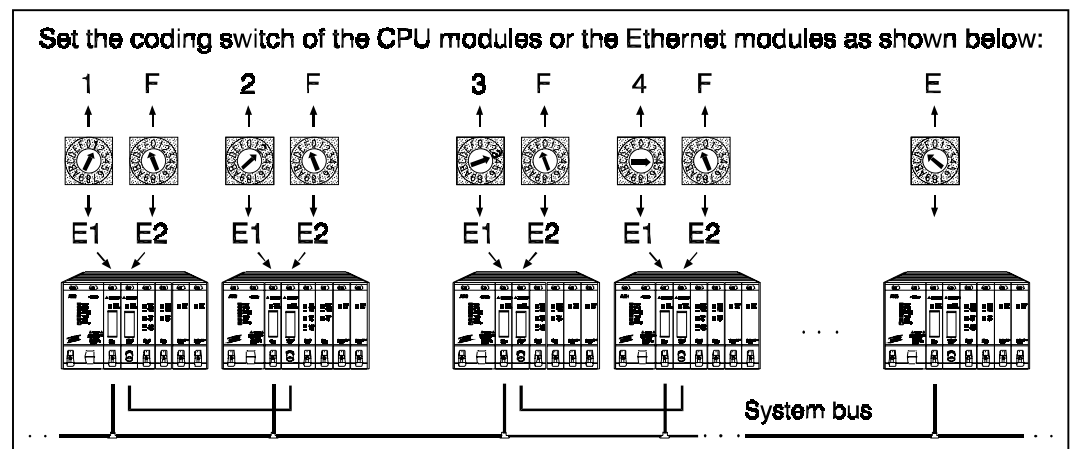


Fig. 3-15 Redundancy case, standard setting